



42-520 Removal and installation of front brake cable control

Removal


- 1 On vehicles with heat shield under intermediate lever, disconnect rubber rings of exhaust suspension. Carefully lower exhaust and support.
- 2 Remove shield.
- 3 Disconnect return spring (12) from spring holding bracket (30). Completely screw back adjusting screw (3) of adjusting bracket (1). Disconnect intermediate lever (6) on mounting of frame floor (2) and remove from adjusting bracket.
- 4 Loosen brake cable control on intermediate lever (6) by pulling cotter pin out of flange bolt and remove flange bolt.

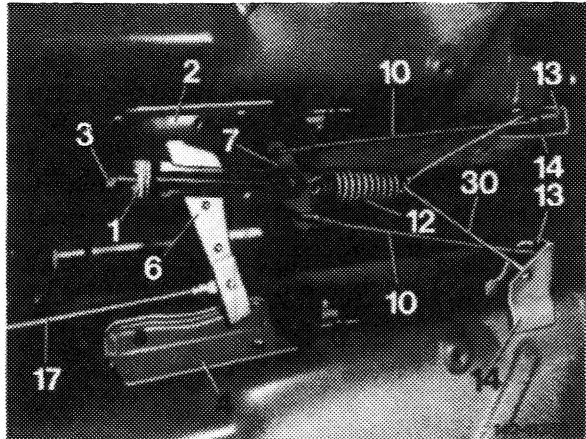

- 5 Remove spring clip (20) from cable guide.

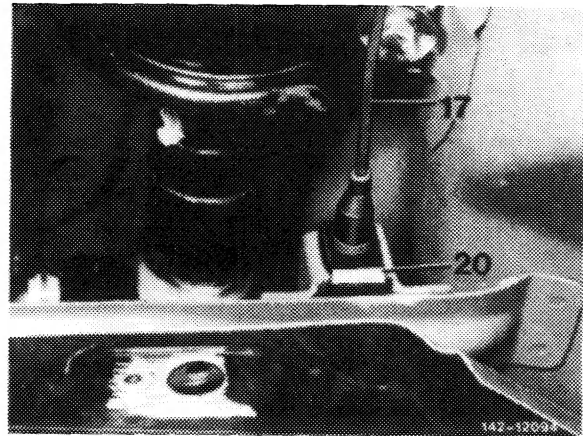


- 6 Remove cover below instrument panel and foot rest (25).
- 7 Disconnect brake cable control (17) from plate of parking brake. Remove spring clamp (20) from cable guide and remove brake cable control (17).
- 8 Pull brake cable control out of frame floor in downward direction.

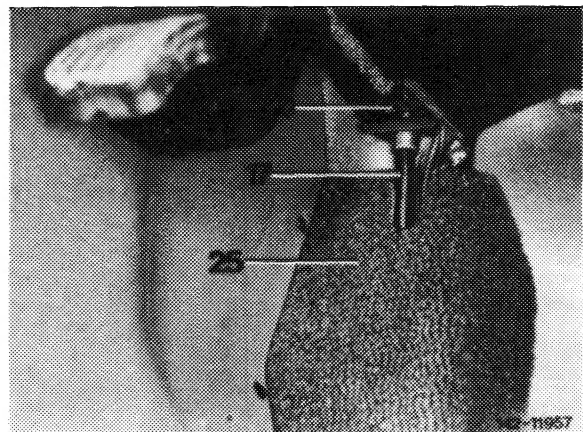


Installation

9 Introduce brake cable control (17) from inside in outward direction through frame floor and rubber sleeve (3). Watch out for correct seat of rubber sleeve (3).

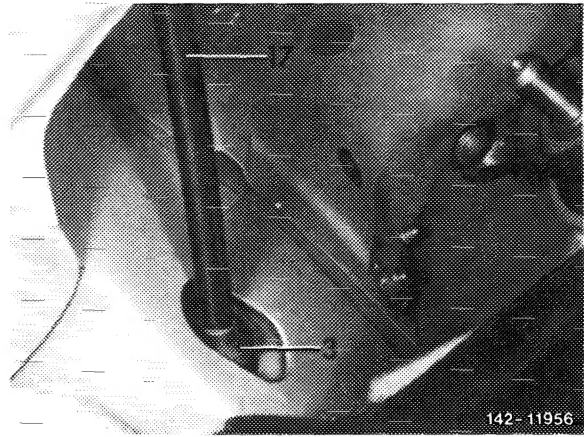

10 Attach brake cable control to pedal plate and insert spring clamp.


11 Insert brake cable control (17) into bracket and secure with spring clamp (20).

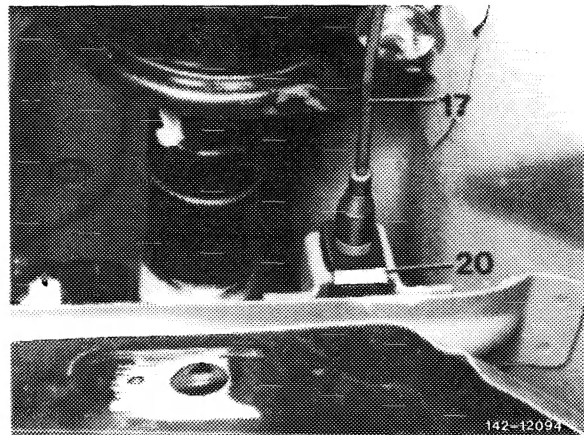

12 Attach brake cable control to intermediate lever (6).

13 Introduce intermediate lever (6) into adjusting bracket (1). Then attach intermediate lever to bearing of frame floor (2).

14 Attach restoring spring (12) to spring holding bracket (30).

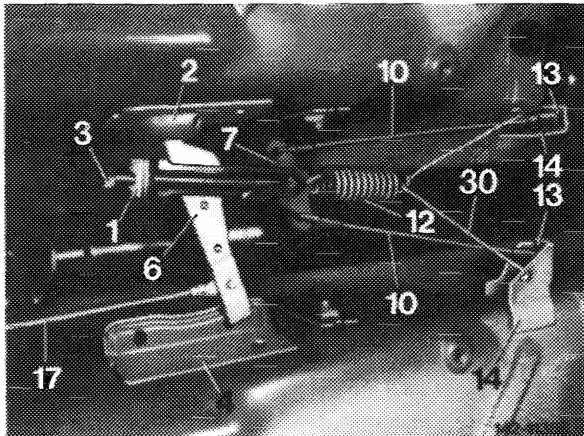

15 Adjust parking brake (42-540).

16 Install shield.

17 Attach exhaust.

18 Install cover below instrument panel and foot rest (25).